

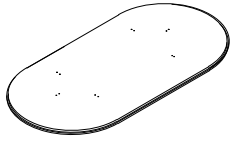
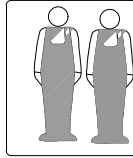


Assembly Instruction 3190-6


①

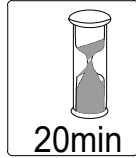

②

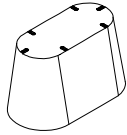

A



X6

B



6*20MM

X24

C



X12


D




X1

ASSEMBLING STEPS

1

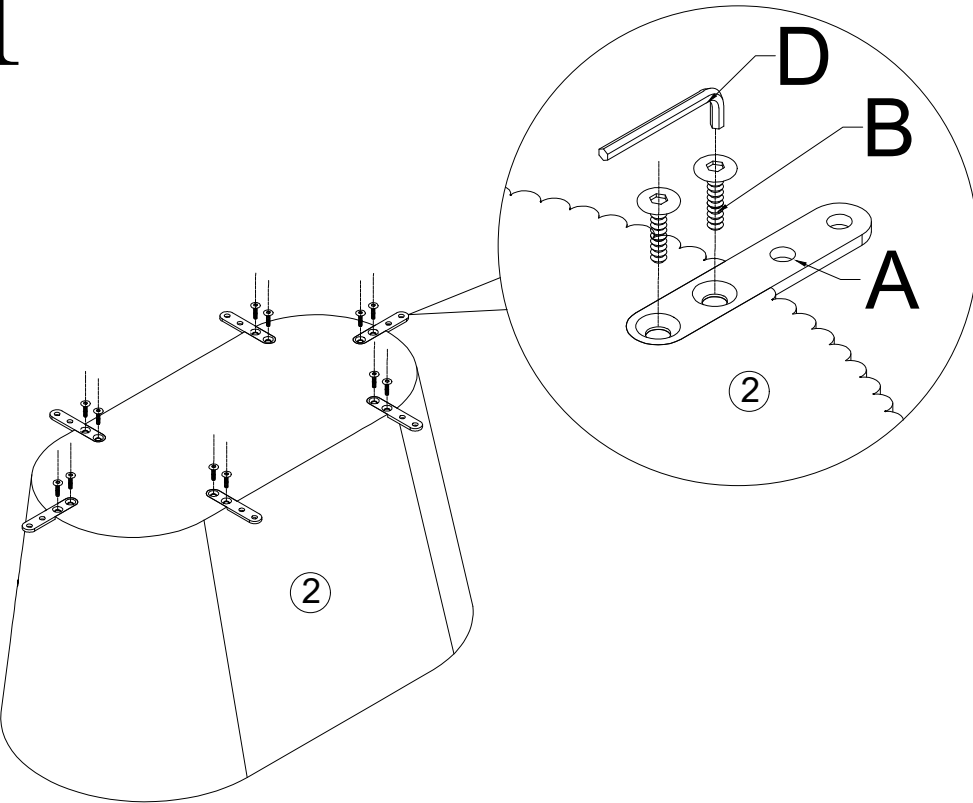

2

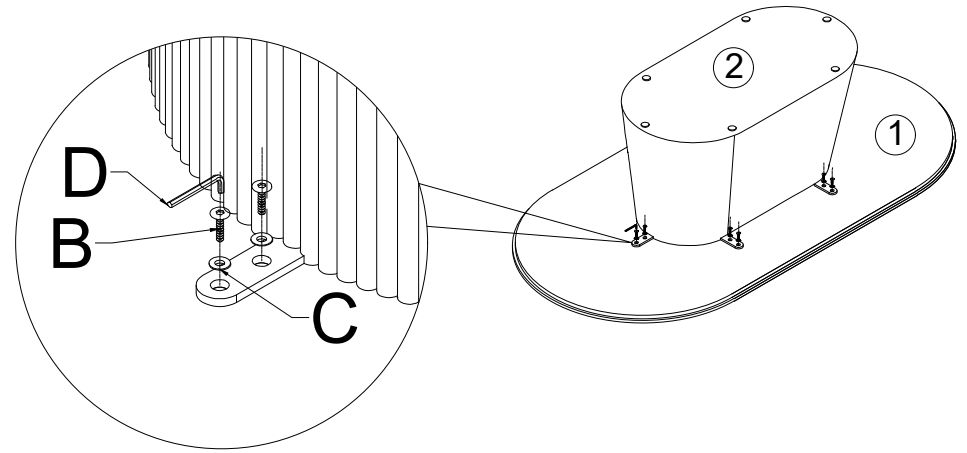

3

