
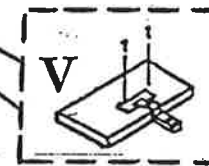
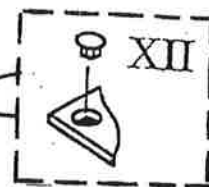
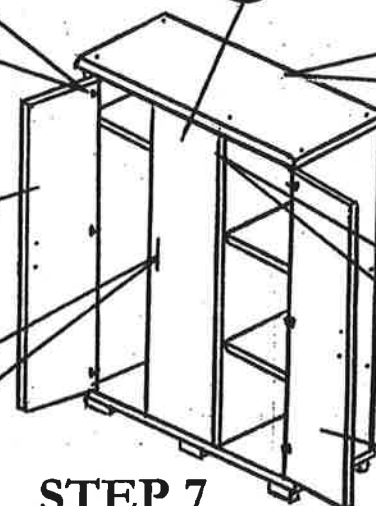
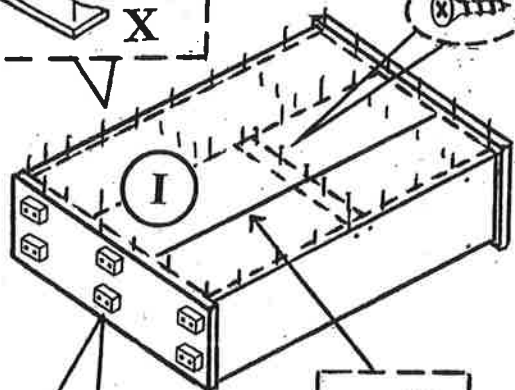
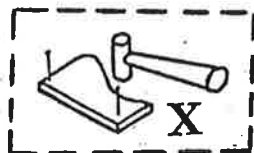
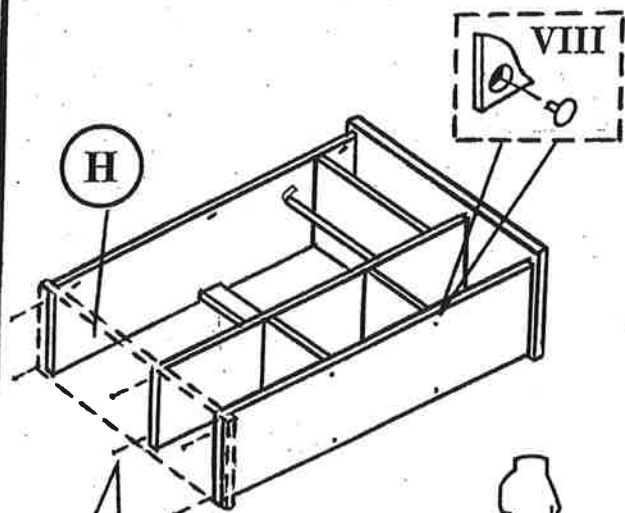
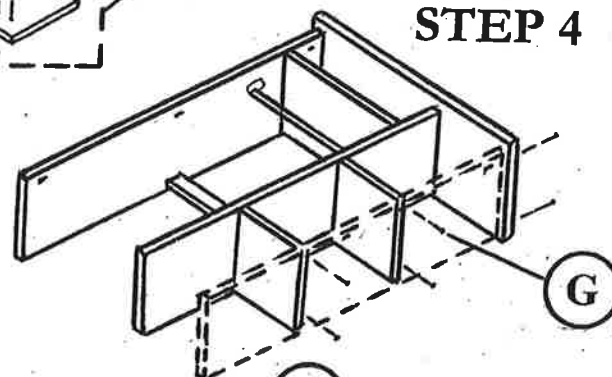
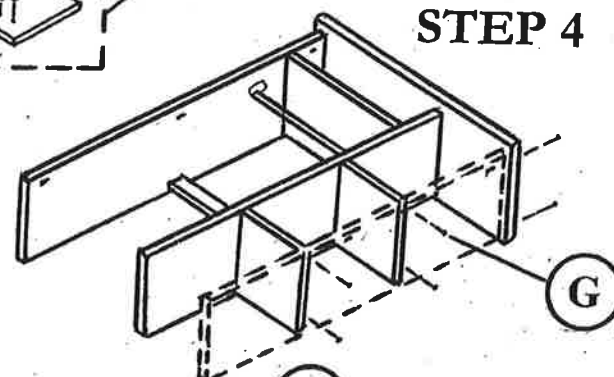
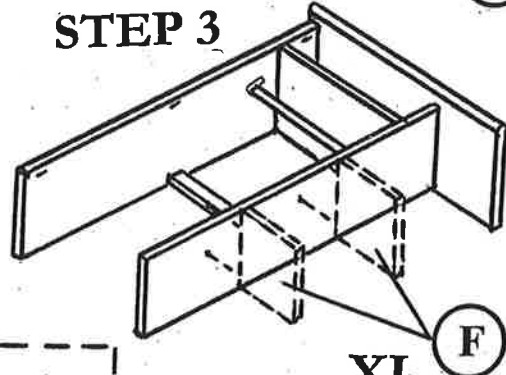



MODEL : 6710 / WARDROBE

**Before you begin, please follow Assembly Instruction carefully.
Then follow them step by step.**


HARDWARE		LIST
NO	DESCRIPTION	QTY
I	JCBCW SCREW M6 x 45	 28pcs
II	ALLEN KEY	 1pc
III	HANDLE & SCREW M3.5 x 30	 3sets
IV	HINGES(A) & SCREW M3.5 x 16	 6sets
V	HINGES(B) & SCREW M3.5 x 16	 3sets
VI	PVC LEG & SCREW M3.5 x 30	 6sets
VII	PIPE WOOD SUPPORT & SCREW M3.5 x 16	 2sets
VIII	STICKER	 8pcs
IX	PIPE	 1pc
X	NAIL	 70pcs
XI	M3.5 x 12 CHIPBOARD SCREW	 5pcs
XII	CAP BIG	 6pcs

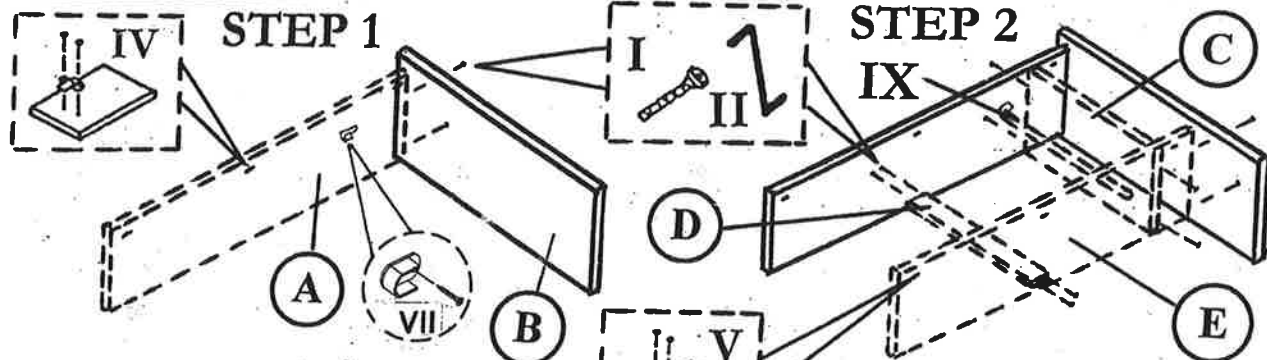

ATTENTION :
NO. J&L = hinges A
NO. K = hinges B

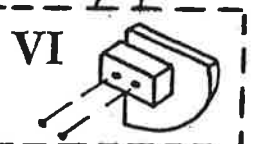

STEP 6

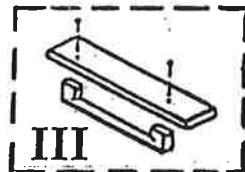


STEP 7



CAUTION:

To clean use soft, dry cloth. Do not use detergent or chemicals.
 Avoid contact with water and direct sunlight.
 To be assembled on a soft, dry, clean and smooth surface.

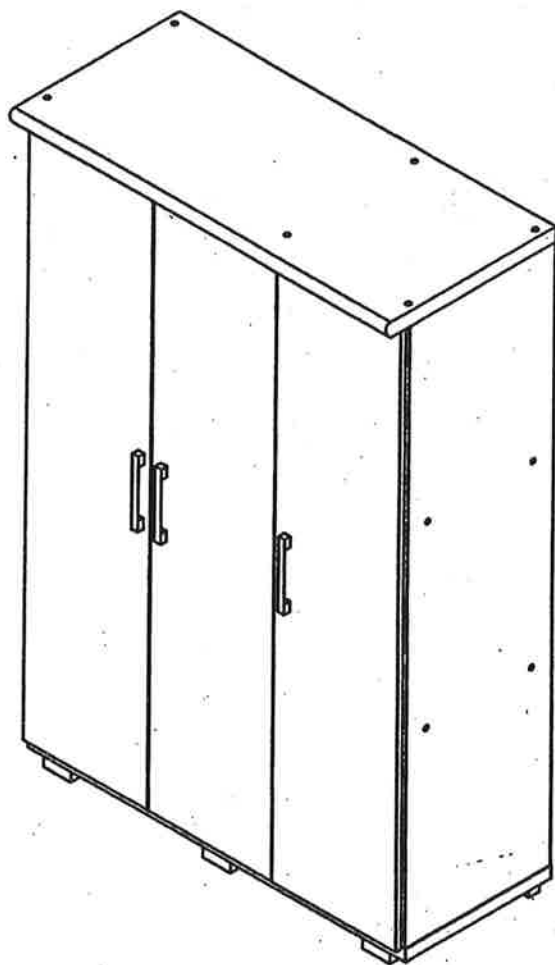

*** Please take carefully of step to Assemble the hinges**

NO. **(J)** Left side door - Use hinges (AIM) - No. IV


NO. **(K)** Centre door - Use hinges (DANGO) - No. V

NO. **(L)** Right side door - Use hinges (AIM) - No. IV

COMPLETE SET

ORDERING REPAIR PARTS

In order to obtain smooth and rapid service when ordering repair parts, please give full attention to the following of PART NUMBER.

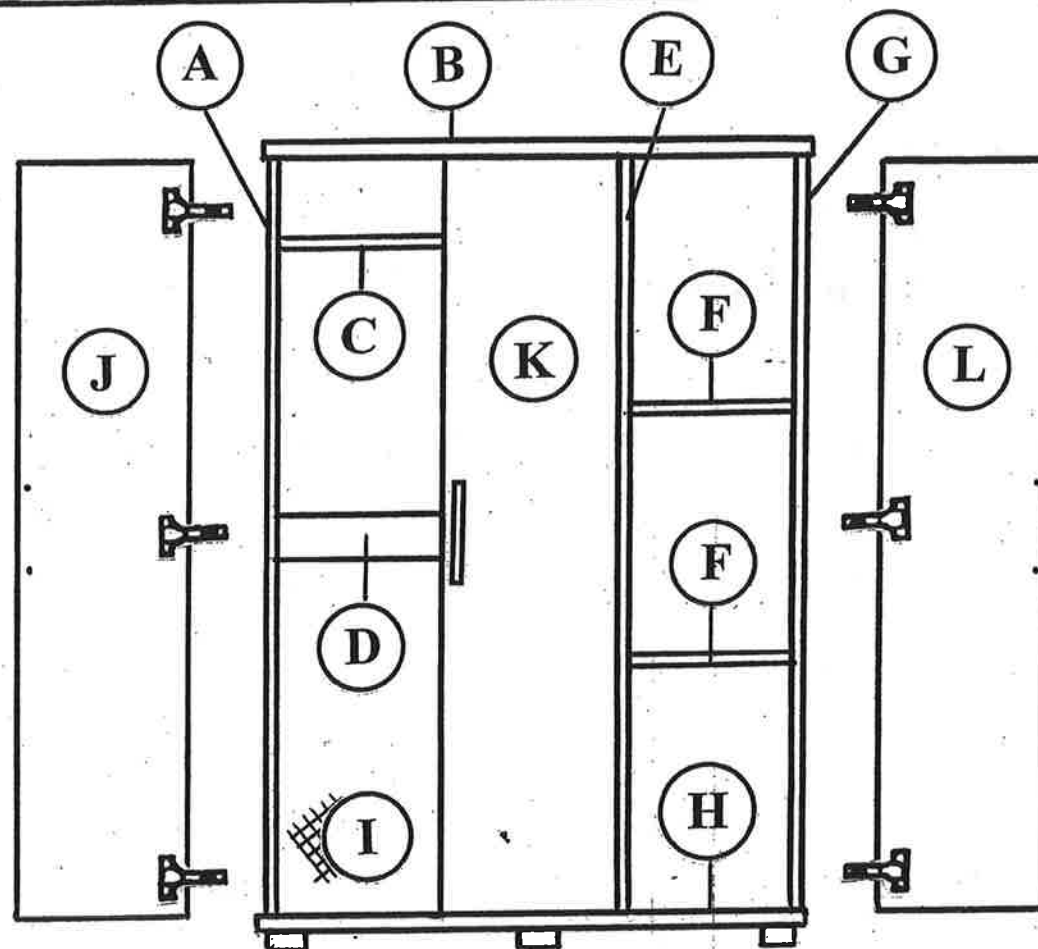

NO	DESCRIPTION	QTY
A	LEFT SIDE	O1
B	TOP	O1
C	CENTRE SHELF	O1
D	BACK SUPPORT	O1
E	CENTRE VERTICAL	O1
F	CENTRE SHELF	O2
G	RIGHT SIDE	O1

NO	DESCRIPTION	QTY
H	LOWEST SHELF	O1
I	BACK	O3
J	LEFT SIDE DOOR	O1
K	CENTRE DOOR	O1
L	RIGHT SIDE DOOR	O1