


Installation instruction

M8*16mm screw



A*8pcs

5mm six-corner spanner




B*1pcs

3mm six-corner spanner




C*1pcs

1

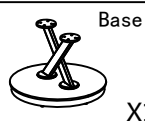


X1

2

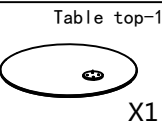


X1


3

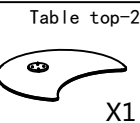



X1

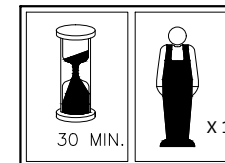


Step 1

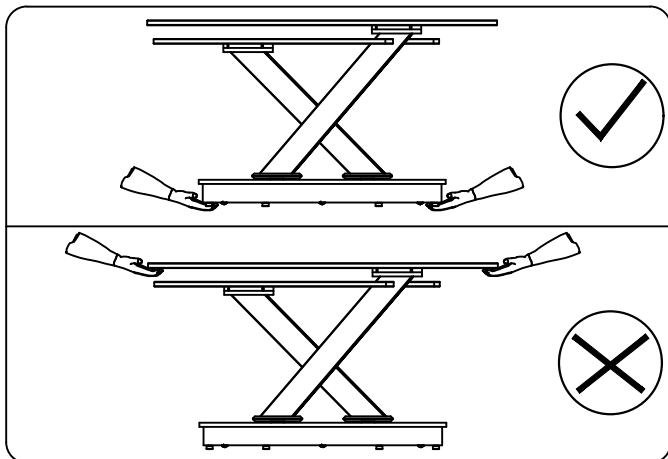

Do not lift from table top,
Only lift from underneath metal frame

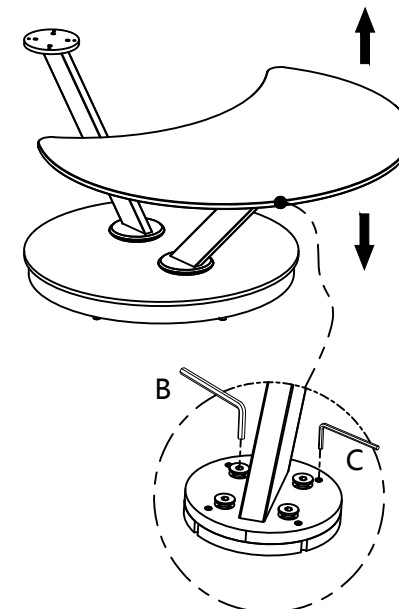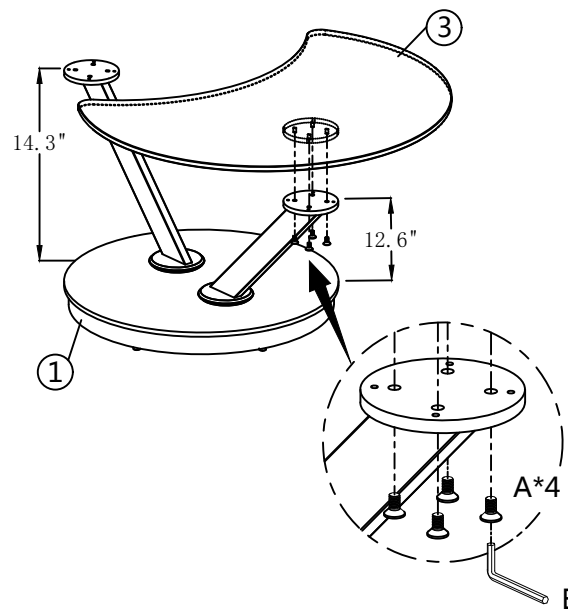

Step 2

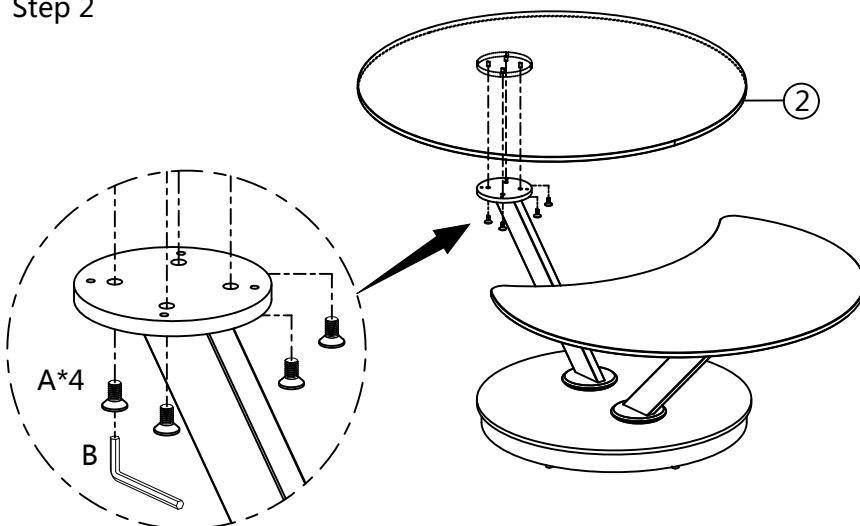

Step 3/Finished

